


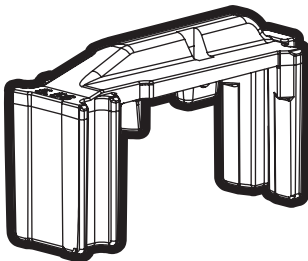


Enhanced Self-Leveling Follower




- ⚠ WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.**
- ⚠ CAUTION: PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING. COMPONENTS UNDER SPRING PRESSURE MAY EJECT FORCEFULLY AND COULD CAUSE INJURY.**
- ⚠ WARNING: OBSERVE SAFE FIREARM HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS BODILY INJURY OR DEATH. MAGPUL INDUSTRIES SHALL NOT BE RESPONSIBLE FOR INJURY, DEATH OR PROPERTY DAMAGE RESULTING FROM FAULTY INSTALLATION, MISUSE, ILLEGAL USE, OR MODIFICATION OF THIS PRODUCT.**

ESLF™ FOLLOWER INSTALLATION

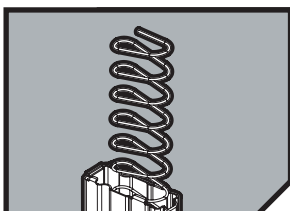


CAUTION: SPRING UNDER PRESSURE

Use care when performing installation as the magazine spring may eject and cause injury.

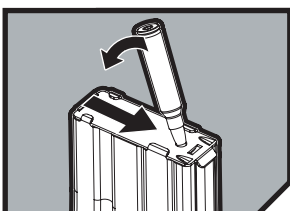


STEP 1: REMOVE FLOORPLATE

Remove floorplate from magazine by gently prying up to disengage the floorplate, then slide the floorplate rearward off the back of the magazine body.

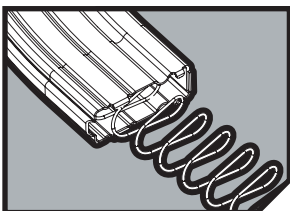


STEP 2: REMOVE OLD FOLLOWER

Remove original follower and spring from magazine body, then detach follower from spring.

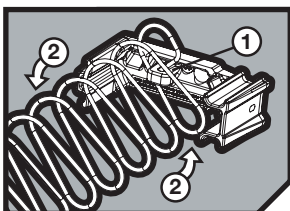

STEP 3: ATTACH ENHANCED SELF LEVELING FOLLOWER (ESLF™)

Attach ESLF™ to original magazine spring by aligning the spring tab (1) to the follower loop and twisting parts together as shown (2).

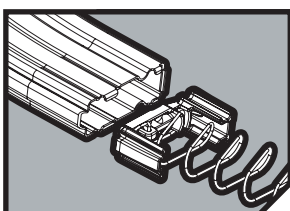

STEP 4: REASSEMBLE MAGAZINE

Drop ESLF™ and spring back into magazine body, and reinstall floorplate.

Attention: Check magazine function via live fire test prior to tactical deployment.