






This document contains technology subject to the Export Administration Regulations (15 C.F.R. Parts 730-774). A prior authorization or license from the U.S. Department of Commerce, Bureau of Industry (and Security) (BIS) is required prior to the export, re-export, release, or transfer of this document to a non-U.S. person whether in the United States or abroad.

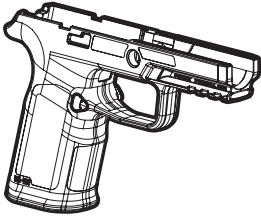


MAG1364 - EHG™ 17 SG9
SIG P320™ - FULL-SIZED

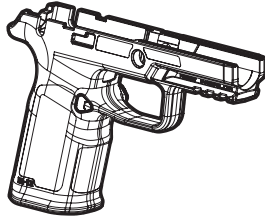

MAG1395 - EHG™ 17 SG9
SIG P320™/M17™ - MANUAL SAFETY

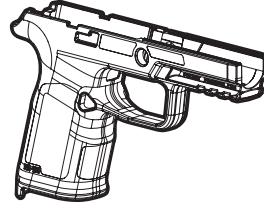


MAG1430 - EHG™ 15 SG9
SIG P320™ COMPACT

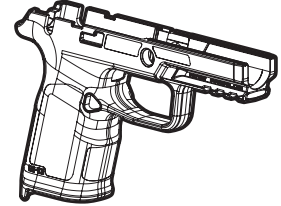

MAG1431 - EHG™ 15 SG9
SIG P320™ COMPACT - MANUAL SAFETY


EHG™ SG9 INSTALLATION INSTRUCTIONS

! WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.

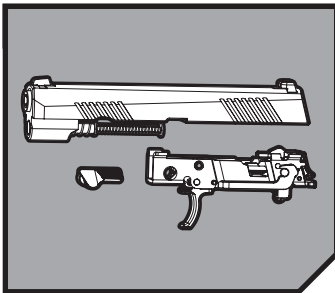


STEP 1: FIELD STRIP WEAPON

Field strip weapon in accordance with TM 9-1005-470-23&P Field Maintenance Manual, removing the *Slide*, *Barrel*, *Recoil Spring*, and *Fire Control Unit*.

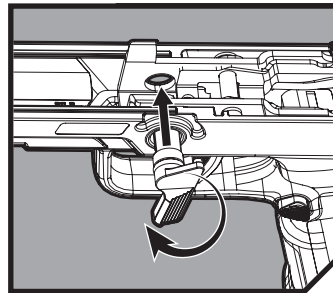


STEP 3: INSTALL TAKEDOWN LEVER

Install the *Takedown Lever* from the left side of the *Enhanced Handgun Grip*, ensuring it is rotated clockwise until it stops.

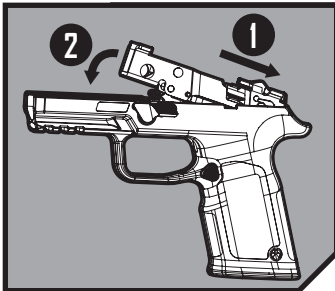

STEP 2: INSTALL FIRE CONTROL UNIT

Insert the *Fire Control Unit*, starting at the rear of the *Enhanced Handgun Grip*, pushing it all the way back (1), then lower the front of the *Fire Control Unit* into the *Enhanced Handgun Grip* (2).

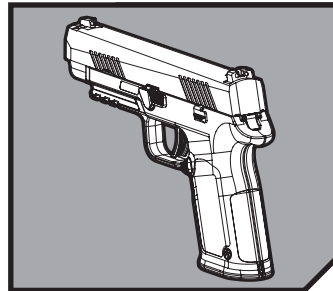

STEP 4: COMPLETE REASSEMBLY

Complete reassembly, final inspection, and function check per TM 9-1005-470-23&P Field Maintenance Manual to verify proper weapon function.

Always test fire your weapon before using it in an operational environment.