



MAG1436 - EHG™ RG9™

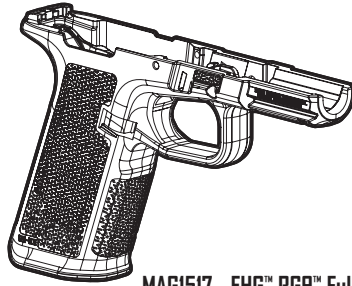

MAG1517 - EHG™ RG9™ Full-size

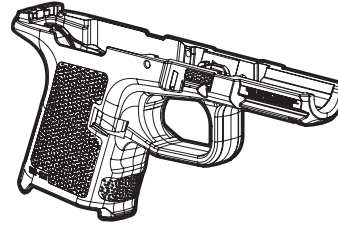


MAG1516 - EHG™ RG9™ Sub-compact

## EHG™ RG9™ INSTALLATION INSTRUCTIONS


**!** **WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.**

### DISASSEMBLY

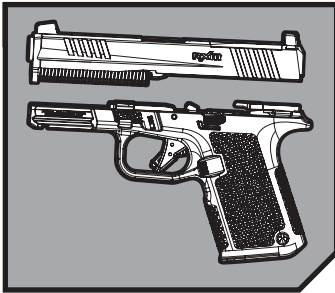

#### STEP 1: REMOVE SLIDE


Unload the pistol and remove the *Slide* per firearm user/armorer manual.

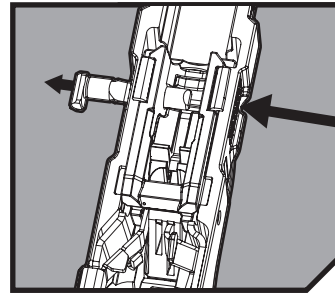

#### STEP 4: REMOVE TAKEDOWN PIN


Using a 3/32" *Punch*, remove the *Takedown Pin* from the right side.

**NOTE:** The *Slide Lock Spring* and the *Takedown Spring* may become dislodged when the *Takedown Pin* is removed.

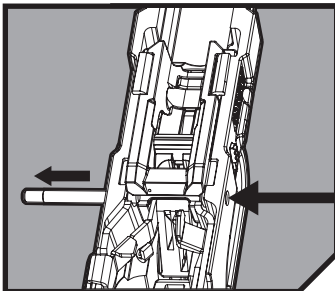


#### STEP 2: REMOVE LOCKING BLOCK PIN

Using a 3/32" *Punch*, remove the *Locking Block Pin* from either side of the *Enhanced Handgun Grip*.

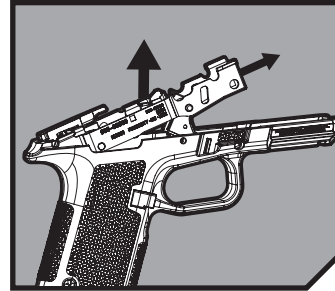


#### STEP 5: REMOVE FIRE CONTROL INSERT

Lift out the *Fire Control Insert*.

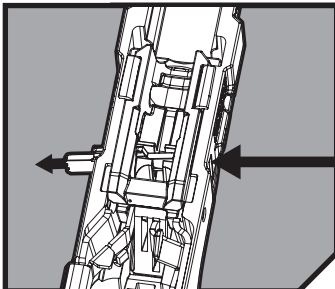

#### STEP 3: REMOVE SLIDE LOCK

Depress the *Slide Lock Spring* and push the *Slide Lock* out from either side.

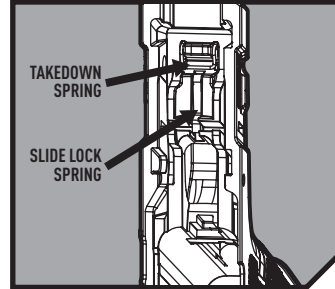

#### STEP 6: REMOVE TAKEDOWN SPRING AND SLIDE LOCK SPRING


Remove the *Takedown Spring* and *Slide Lock Spring* from the *Enhanced Handgun Grip* and retain them for reinstallation in the replacement *Enhanced Handgun Grip*.

**NOTE:** Your *Enhanced Handgun Grip* comes complete with a replacement *Takedown Spring* (Qty: 1) and *Slide Lock Spring* (Qty: 1), in case of loss during disassembly.




This document contains technology subject to the Export Administration Regulations (15 C.F.R. Parts 730-774). A prior authorization or license from the U.S. Department of Commerce, Bureau of Industry (and Security) (BIS) is required prior to the export, re-export, release, or transfer of this document to a non-U.S. person whether in the United States or abroad.

## REASSEMBLY

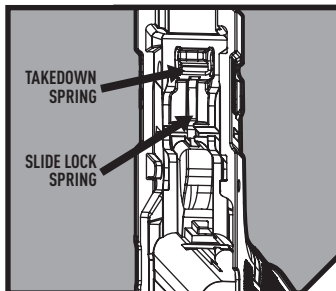


### STEP 1: INSTALL TAKEDOWN SPRING AND SLIDE LOCK SPRING

Install the *Takedown Pin Spring* and the *Slide Lock Spring* in the new *Enhanced Handgun Grip*.

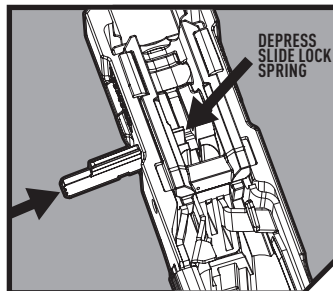


### STEP 4: INSTALL SLIDE LOCK

Using a  $3/32$ " *Punch* depress the *Slide Lock Spring* and install the *Slide Lock* with the ramped surface facing forward from either side so that it is held in place by the *Slide Lock Spring* in the center.

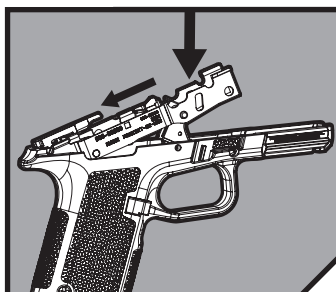


### STEP 2: INSTALL FIRE CONTROL INSERT

Insert the *Fire Control Insert* starting at the rear of the *Enhanced Handgun Grip*, pushing it all the way back, then lower the front of the *Fire Control Insert* into the *Enhanced Handgun Grip*.

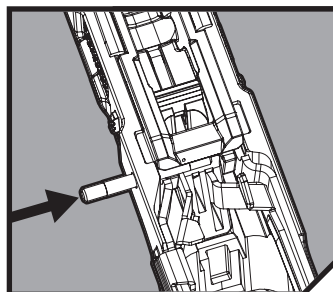

### STEP 5: INSTALL LOCKING BLOCK PIN

Install the *Locking Block Pin* from the left side of the *Enhanced Handgun Grip* being careful to go over the top of the *Takedown Pin Spring* leg on the left side of the unit.

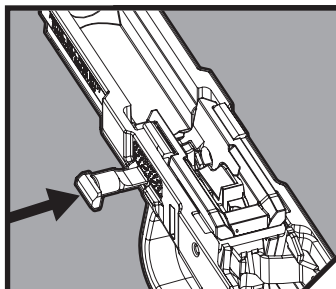

### STEP 3: INSTALL TAKEDOWN PIN

Install the *Takedown Pin* from the left side, with the U-shaped notch facing up.



### STEP 6: COMPLETE REASSEMBLY

Complete reassembly, final inspection, and function check per firearm user/armorer manual to verify proper weapon function.

***Always test fire your weapon before using it in an operational environment.***