




SPEEDTHREADER for PALS/MOLLE systems


INSTALLATION INSTRUCTIONS

1. Test Threader on Pouch and Vest

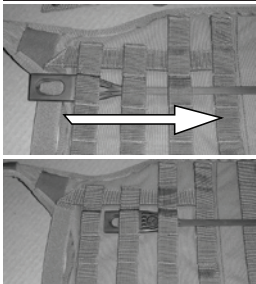


Slide threader through BOTH vest and pouch to ensure SpeedThreader can pass through straps. New vests are always tight and the SpeedThreader can be used to stretch out the straps if needed. Using the holes at the end of the SpeedThreader, boot laces can be used as an aid to tug the threader through.

2. Thread Pouch and Vest

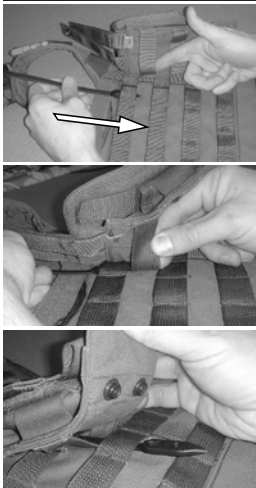

Place pouch onto vest in the location desired. Using fingers, guide the SpeedThreader through the straps, alternating between pouch/vest straps.

3. Position SpeedThreader

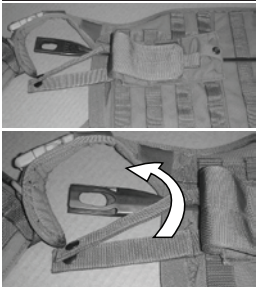


After the SpeedThreader is through the straps, make sure the Magpul Logo is facing towards the vest.

4. Attach Pouch Strap to Threader



Place pouch strap with snap into SpeedThreader head as shown. Slowly pull on rear of SpeedThreader while holding strap in until the snap has slid under the first vest strap.

5 Pull Threader and Strap Through

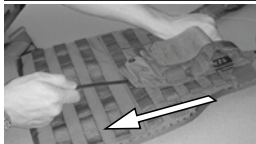


Once the snap is locked into the threader, hold the top of the vest securely and use the other hand to tug the SpeedThreader and strap through.

6. Unlock Threader from Strap



Pull until the SpeedThreader head emerges from the base of the pouch. Slowly push back on the speed threader head to release the snap from the SpeedThreader.

7. Test Strap Threading

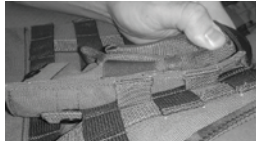

After snapping the base snap of the pouch, the pouch and vest should be interlaced correctly. Repeat process for second pouch strap.