


MAG1377 - DT STOCK

Recommend Tools: 1/8" hex key


DT STOCK INSTALL INSTRUCTIONS

⚠ WARNING: BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.

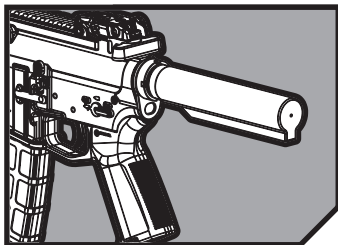

STEP 1: REMOVE EXISTING STOCK


Remove existing stock per armory guidelines. Refer to US Army TM 9-1005-319-23&P for assistance.

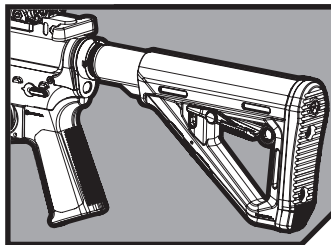

STEP 3: VERIFY INSTALL

Perform final inspection including function test per *US Army TM 9-1005-319-23&P Unit and Direct Support Maintenance Manual* to verify correct installation. If you experience any issues during installation, please refer to the "Related Info" tab, located on the product page at www.magpul.com.


Always test fire your weapon before using it in an operational environment.

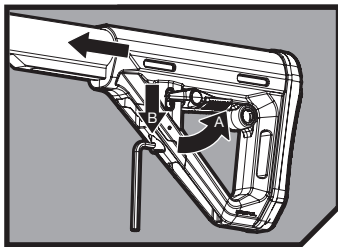

STEP 2: INSTALL DT STOCK


DO NOT FORCE PARTS TOGETHER! Align the *Stock Body* with the *carbine receiver extension* and gently slide together until the stock stops (approx 2-1/8"). Depress *Release Latch* with first hand (A). With other hand, insert a 1/8" or smaller diameter tool in the *Release Pin* and pull down firmly (B). Push stock forward to mount.

DT STOCK ADJUSTMENT INSTRUCTIONS

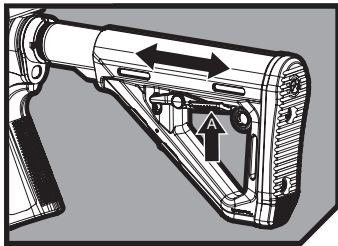


EXTEND/COLLAPSE STOCK

Fully depress the *Release Latch* (A) and pull the stock rearward to extend or push stock forward to collapse. Intermediate positions may be selected by depressing the *Release Latch* and moving the stock back to the desired position.

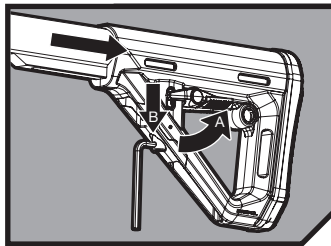

REMOVING DT STOCK

Depress *Release Latch* with first hand (A). With other hand, insert a 1/8" or smaller diameter tool in the *Release Pin* and pull down firmly (B). Pull the *stock* away from the *receiver* until completely removed.

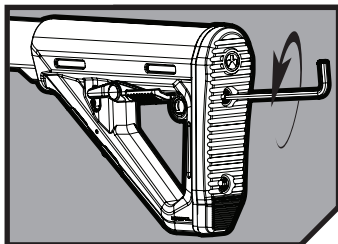

REMOVE RUBBER BUTT PAD

Use an 1/8" hex key to remove the two *Butt Pad Screws*.

The *DT Stock* is compatible with the *MOE SL® Enhanced Rubber Butt-Pad, 0.70"* (MAG349).